

TO REMOVE :

- 1) TAKE TOP OF CB CASE
- 2) REMOVE BOLTS (NO. UNCERTAIN)
- 3) LIFT FORK STRUCTURE UP FAR ENOUGH TO REMOVE TOP, LOCATION PIN/TUBE
- 4) LOWER FORK AND BOARD FAR ENOUGH OUT OF BOAT TO REMOVE PIVOT TUBE.
- 5) CAREFULLY, DONT LOSE RUBBING PEGS.

